



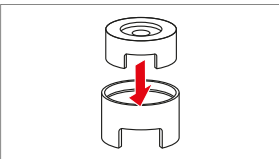
# MANUAL TEDGUM

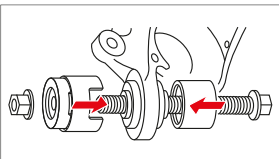


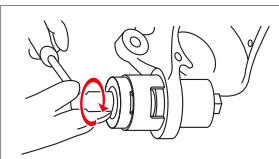
Ball joint bushing puller TED99545 manual – BMW, Opel, Saab

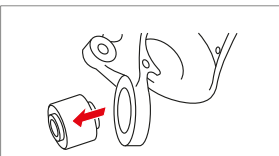
**TEDGUM® TED99545** for bushing 00086288, 00085621, 00504702

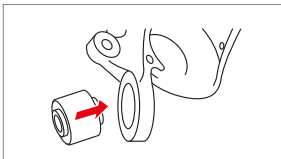
The puller enables correct assembly and disassembly of the bushing directly on the car. Thanks to the triangle thread, puller has a high durability. To ensure proper operation, lubricate the bolt and bearings.

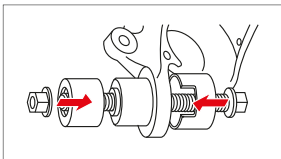
- 

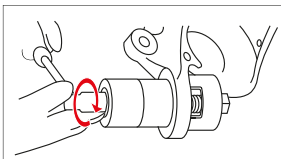
Put the drive plates together.
- 

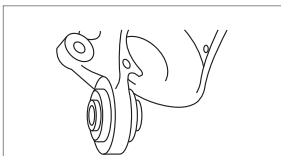
Put on the drive plates and the bolt on the worn bushing in socket.
- 

Turn everything together. During disassembly, check that the bushing goes out the socket correctly.
- 

Remove the worn bushing and thoroughly clean the socket.
- 

Grease the socket and set the new bushing accordingly.
- 

Put on the drive plates and tighten everything together.
- 

During assembly, monitor whether the bushing goes into socket correctly.
- 

Correctly pressed in bushing.

The puller can be applied to:

**BMW SERIES 1** (e81, e82, e87, e88) **BMW SERIES 3** (e36, e46, e90, e91, e92, e93)

**BMW X1** (e84) **X3** (e83) **Z1, Z4**

**OPEL VECTRA** (1995->2003) **SAAB 9-5** (1997->)



This and other manuals are available for download on our website at:

<https://www.tedgum.pl/en/technical-support/>

Manual shown above is just a presentation showing how the repair procedure can be made. **TEDGUM®** company does not bear responsibility for any errors in the manual and incorrect interpretation of the manual. Repair should be preceded by skilled personnel with the use of appropriate tools and with keeping all the safety means. All rights reserved.