DISASSEMBLY OF THE METAL-RUBBER-METAL BUSHING AND ASSEMBLY OF THE METAL-POLYURETHANE BUSHING (2 HALVES) WITHOUT THE OUTER SLEEVE

BEFORE DISASSEMBLY

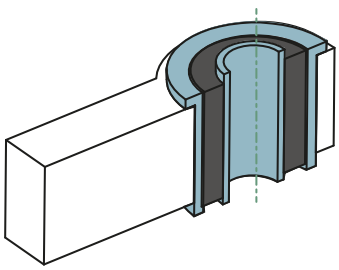

DISASSEMBLY

1

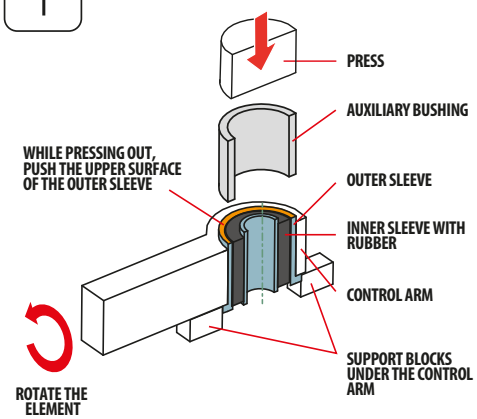

2

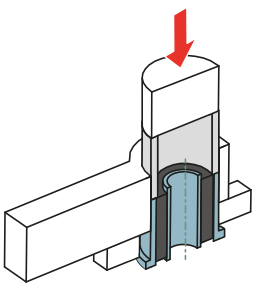

CORRECTLY DISASSEMBLED ELEMENT

ATTENTION!
REMEMBER TO MAKE A CHAMFER BEFORE INSTALLATION TO FACILITATE INSTALLATION OF THE NEW ELEMENT

ATTENTION!
BEFORE ASSEMBLY, THOROUGHLY CLEAN THE ENTIRE SOCKET OF ALL CONTAMINANTS

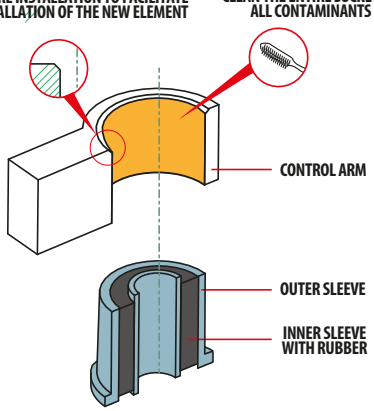

INSTALLATION

1

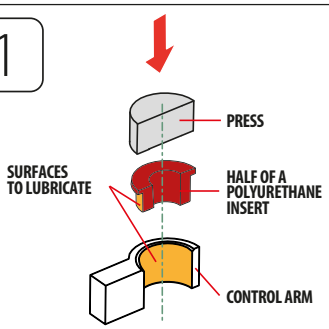

PRESS THE POLYURETHANE BUSHING INTO THE FIRST SIDE OF THE SOCKET

2

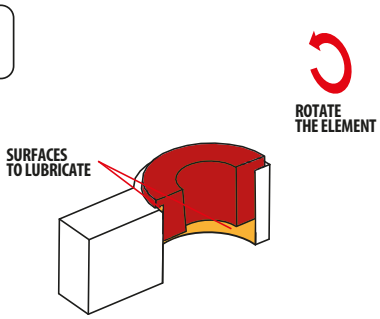

TURN THE CONTROL ARM

3

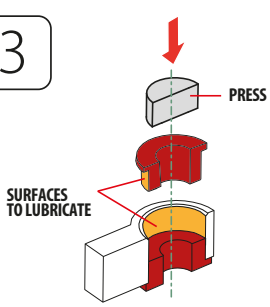

PRESS THE POLYURETHANE BUSHING INTO THE FIRST SIDE OF THE SOCKET
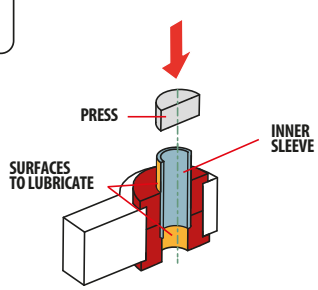
4